Airbag Systems

From August 1999

Deviate relay location and fuseplacements as well as the locations of multiple connectors see section "component locations".

Relay location on the thirteenfold auxiliary relay panel, above relay panel:

Relay panel:

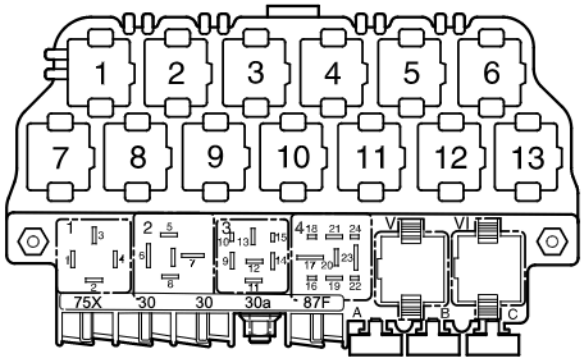

3B–20676

Relay location on the eightfold auxiliary relay panel, behind relay panel:

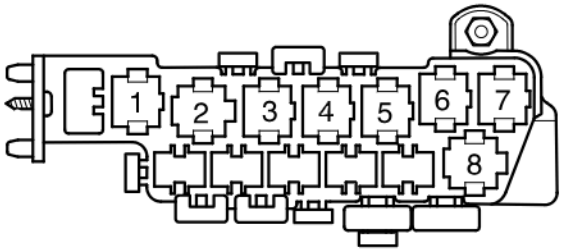

3B–20515

Note:

- *Number in parentheses indicates production control number stamped on relay housing.*

Fuse colors

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

30 A - green
25 A - white
20 A - yellow
15 A - blue
10 A - red
7,5 A - brown
5 A - beige

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

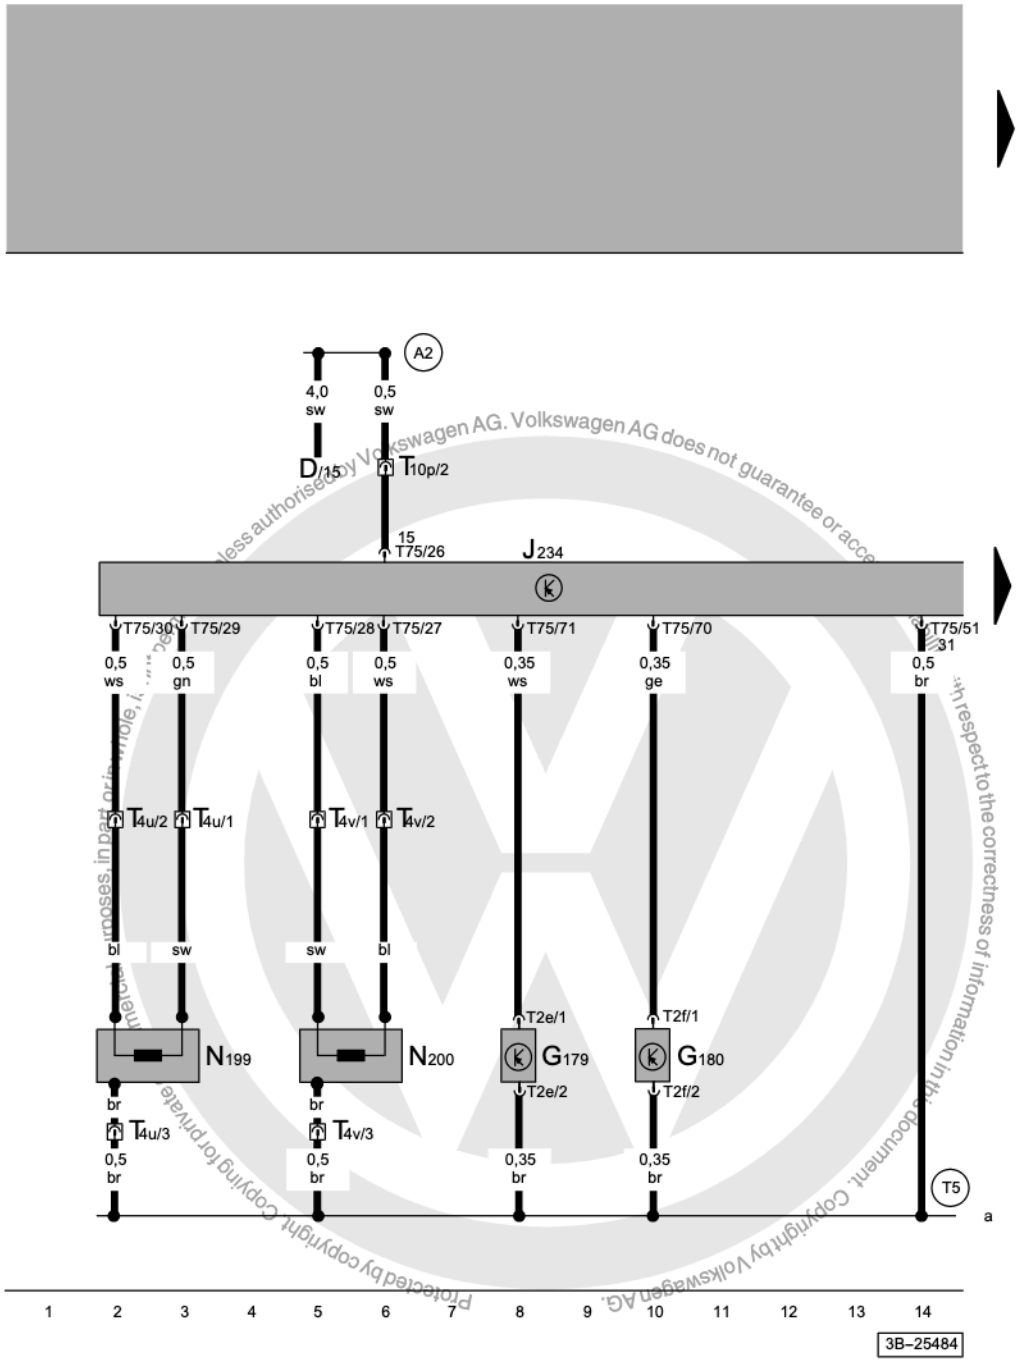

Airbag control module, igniter for side airbag, crash sensor for side airbag

D	Ignition/Starter Switch
G179	Crash sensor for side airbag, driver's side
G180	Crash sensor for side airbag, passenger side
J234	Airbag Control Module, behind console
N199	Igniter for side airbag, driver's side
N200	Igniter for side airbag, passenger side
T2e	Double Connector
T2f	Double Connector
T4u	4-Pin Connector, yellow, below driver's seat
T4v	4-Pin Connector, yellow, below passenger's seat
T10p	10-Pin Connector, yellow, connector station A-pillar, right
T75	75-Pin Connector, on Airbag Control Module
A2	plus connection (15), in instrument panel wiring harness
T5	wire connection -2-, in airbag wiring harness

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private and commercial purposes, in part or in whole, is not permitted unless authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.

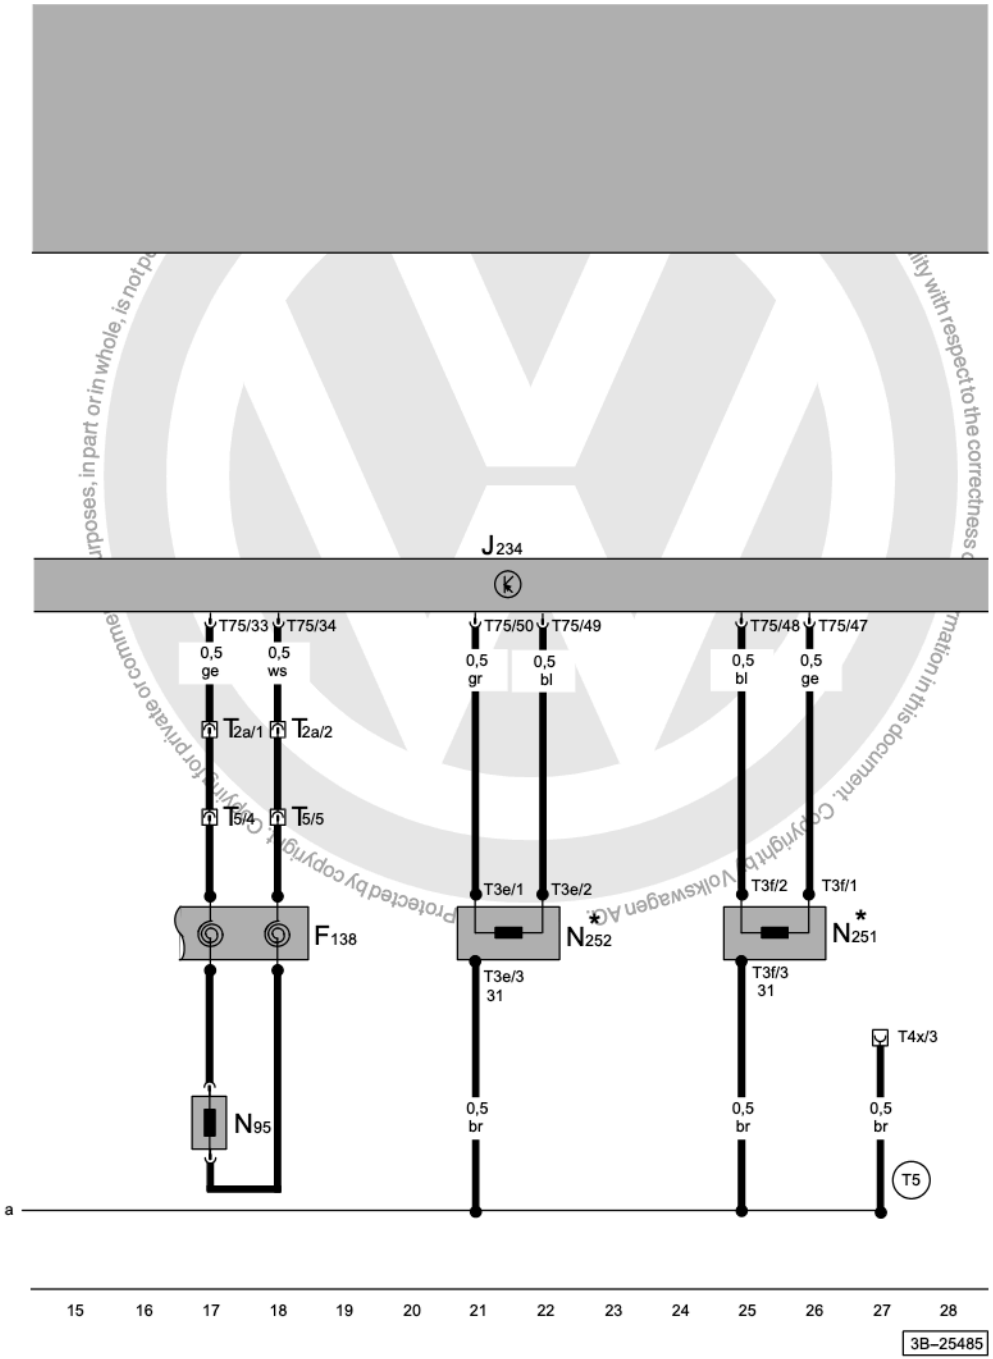

Airbag control module, driver's side airbag igniter, igniter for head airbag, airbag spiral spring/return spring with slip ring

F138	Airbag Spiral Spring/Return Spring With Slip Ring
J234	Airbag Control Module, behind console
N95	Driver's Side Airbag Igniter
N251	Igniter for head airbag, rear, driver side
N252	Igniter for head airbag, rear, passenger side
T2a	Double Connector, yellow, connector station A-pillar, left
T3e	3-Pin Connector
T3f	3-Pin Connector
T4x	4-Pin Connector, yellow, connector station A-pillar, right
T5	5-Pin Connector, yellow, behind steering column switch cover
T75	75-Pin Connector, on Airbag Control Module
(T5)	wire connection -2-, in airbag wiring harness
*	vehicles with head airbag only

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copyright by Volkswagen AG. Copying for private or commercial purposes, in part or in whole, is not permitted without the prior written consent of Volkswagen AG. No liability with respect to the correctness of information in this document.

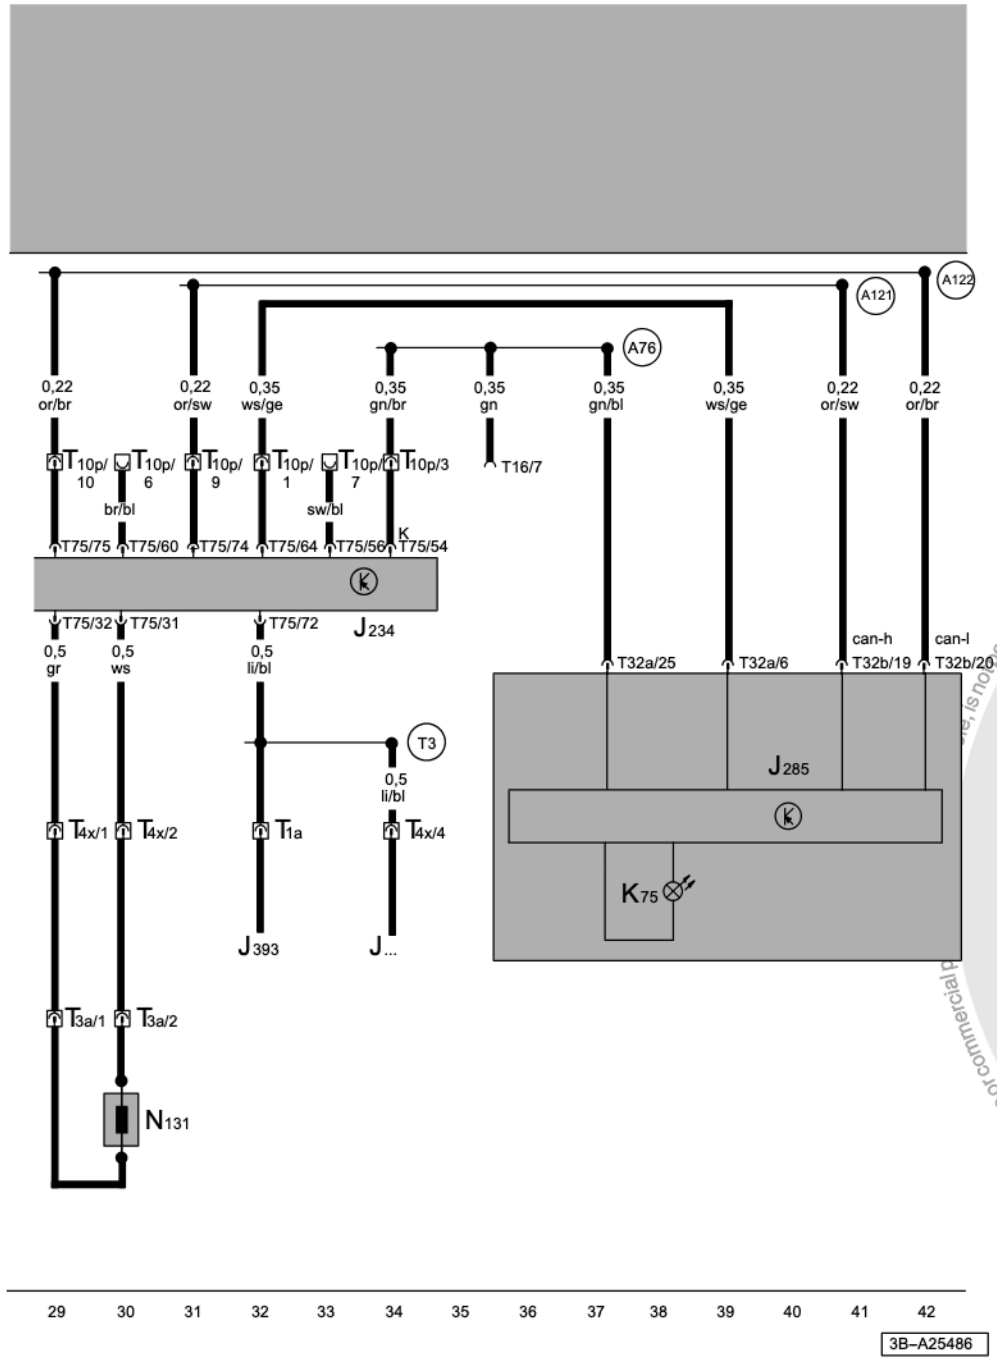

Airbag control module, driver's side airbag igniter, passenger's side airbag igniter, airbag malfunction indicator lamp (MIL)

J...	Engine Control Modules (ECM)
J234	Airbag Control Module, behind console
J285	Control module with indicator unit in instrument panel insert
J393	Central control module for comfort system
K75	Airbag Malfunction Indicator Lamp (MIL)
N131	Passenger's Side Airbag Igniter 1
T1a	Single Connector, black, connector station A-pillar, right
T3a	3-Pin Connector, behind instrument panel, right
T4x	4-Pin Connector, yellow, connector station A-pillar, right
T10p	10-Pin Connector, yellow, connector station A-pillar, right
T16	16-Pin Connector, Data Link Connector (DLC), below instrument panel, left
T32a	32-Pin Connector, blue, on instrument cluster
T32b	32-Pin Connector, green, on instrument cluster
T75	75-Pin Connector, on airbag control module
A76	Connector (K-diagnosis wire) in instrument panel wiring harness
A121	Connector (high bus) in instrument panel wiring harness
A122	Connector (low bus) in instrument panel wiring harness
T3	wire connection, in airbag wiring harness

ws	=	white
sw	=	black
ro	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

Protected by copyright. Copying for private or commercial purposes, is not permitted without the express authorised by Volkswagen AG. Volkswagen AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Volkswagen AG.